

FOUR SEASONS *Vintage*

INSTRUCTIONS

Carefully unpack the product from its box and packaging. Depending on the product type, you may find that it is fixed to the inner box by means of two or more small screws located on the underside of the box. To take the clock out of the box, unscrew all of the screws on the underside of the box whilst ensuring that the clock is supported to avoid it falling out.

SETTING THE CLOCK

Remove the battery cover on the back of the clock; Insert 1 x AA in to the battery compartment. Ensure that the battery is inserted with the correct polarity (+/-). Adjust the clock to show the correct time using the wheel movement on the back of the clock. Replace the battery cover on the back of the clock.

THERMOMETER & HYGROMETER

The thermometer is designed as a guide to measuring the temperature to within +/- 3°C. Place the item in an area of shade for most accurate temperature readings within +/- 3°C.

The hygrometer measures the relative humidity of the air.

The thermometer and hygrometer are pre-calibrated and do not require any set up. Place the item in an area of shade for most accurate temperature readings within +/- 3°C.

PLACEMENT & FIXING

Preferably place your item in an area that is out of direct heat and sunlight. Select the correct fittings for the area the item will be fixed e.g. wood, masonry or plasterboard. Hang the clock from the screw hole on the back of the item – do not hang direct from the outer rim.

Please note: as the item may be subjected to the elements, it is normal under certain conditions for some condensation to form on the inside face of the clock & weather station. This is not a fault as airflow is required through the body of the housing in order for the thermometer to function correctly. This condensation will be seen to clear, (but may return) dependant upon conditions and the position upon where the product is fixed.

